



# UltraLift™

**SERIES**

## **ULTRALIFT™ 4400-8800** **SHALLOW WATER** **FRONT MOUNT** **E-SERIES**

### **PUSH BUTTON CONTROL INSTRUCTIONS**

#### **UP/LIFT**

1. Position the boat directly over the hoist using guide ropes.
2. Press the **UP** button.
3. Once the boat is fully raised and bubbles are exhausted from the tanks, press the **STOP** button.

#### **LOWER/ LAUNCH**

1. Press the **DOWN** button.
2. You can press the **STOP** button at any time to pause the lift or launch process. If you want the valve to be closed when the lift is in the lowered position; press the **STOP** button.

---

### **MANUAL CONTROL INSTRUCTIONS**

#### **LIFT**

1. Position boat over lift; attach guide ropes to rear boat cleats.
2. Rotate valve handle to **LIFT/LAUNCH** and turn **Blower Switch ON**. *NOTE: If Blower does not activate reset GFCI switch.*
3. Gently push the boat back until guide ropes are taut and bow is centered over lift.
4. Release boat when lift contacts the hull.
5. When large air bubbles appear from under the tanks, turn **Blower Switch OFF** and rotate valve handle to **DRY DOCK**.

#### **LAUNCH**

1. Rotate valve handle to **LIFT/LAUNCH** position. **LEAVE BLOWER SWITCH OFF.**
2. When the boat is floating freely, rotate valve to **DRY DOCK**.
3. Remove guide ropes from boat.



**ULTRALIFT™**  
**10,000-32,000**

## **TO LIFT BOAT:**

1. Position boat over lift and attach guide ropes to rear cleats of boat. Push boat back until guide ropes are taut and bow is centered over lift.
  - 2a. Two Tank Models:  
With Rapid Launch handle in the down position (closed) rotate valve handles to **LIFT/LAUNCH**.
  - 2b. Three to Five Tank Models: With Rapid Launch handle in the down position (closed) rotate the two valve handles leading to the **OUTBOARD** tanks only to **LIFT/LAUNCH** - leave other valve handles in **DRY DOCK**.
  3. Both Models: **Turn Blower Switch ON.**  
*NOTE: If Blower does not activate, reset GFCI switch.*
  4. Both Models: Release boat when lift contacts the hull.
  5. Three to Five Tank Models: When large air bubbles appear from under the outboard tanks, rotate valve handle leading to **CENTER** tank to **LIFT/LAUNCH**.
  6. Both Models: When large air bubbles appear from under all tanks, turn Blower Switch OFF and rotate all valve handles to **DRY DOCK**.
- 

## **TO LAUNCH BOAT:**

1. Raise Rapid Launch handle to the up position (open).
- 2a. Two Tank Models: Rotate valve handles to **LIFT/LAUNCH**.
- 2b. Three to Five Tank Models: Exhaust the **CENTER** tank **FIRST** Rotate to **LIFT/LAUNCH** valve handle leading to **CENTER** tank. When air can no longer be heard exhausting from **CENTER** tank, rotate valve handle leading to the **OUTBOARD** tanks to **LIFT/LAUNCH**, and rotate to **DRY DOCK** valve handle leading to **CENTER** tank. When the boat is floating freely, rotate all valve handles to **DRY DOCK**.